# IRONING BOARD WITH VACUUM & HEATER 4

### INSTRUCTIONS FOR USE AND INSTALLATION OF MODEL DL-1900

#### **ASSEMBLY INSTRUCTIONS**

- REMOVE ALL PARTS AND PIECES FROM THE BOX. PLACE THE IRONING BOARD BASE ON THE FLOOR AND INSERT 4
  LEVELING GLIDES ON THE BOTTOM.
- 2. INSERT COLUMN ONTO THE BASE AND FASTEN WITH 4 SCREW SETS (A WASHER, A LOCK WASHER AND A SCREW).
- 3. FASTEN THE COLUMN BRACE ONTO THE COLUMN WITH 8 SCREW SETS. POSITION IT SO THAT THE OPENING FOR THE HANGER ROD IS ON THE OPPOSITE SIDE OF YOUR NORMAL IRONING POSITION.
- 4. PLACE THE IRONING BOARD ON THE FLOOR TOPSIDE DOWN. FASTEN IT TO THE COLUMN/BASE ASSEMBLY WITH 6 SCREW SETS.
- 5. ATTACH THE GARMENT RACK TO THE COLUMN WITH 2 SCREW SETS.
- 6. TURN THE WHOLE ASSEMBLY TOPSIDE UP. INSERT THE HANGER ROD TO THE OPENING ON THE COLUMN BRACE. FASTEN WITH 2 ROUND SCREWS.
- 7. PLACE THE VACUUM PEDAL AT YOUR DESIRED LOCATION ON THE BASE RAIL AND PUSH IT ONTO THE RAIL AND MOUNT IT WHERE DESIRED.
- 8. PLUG THE ELECTRIC CORD TO YOUR AVAILABLE OUTLET. A SINGLE OUTLET LOCATION SHOULD BE SOLELY DESIGNATED FOR THE VACUUM BOARD USE ONLY.

#### **CAUTION:**

- 1. DO NOT LEAVE GARMENT ON HOT BOARD AS IT COULD BE BURNED OR DAMAGED.
- 2. DO NOT LEAN OR SIT ON THE IRONING BOARD.
- 3. USE PROPER SILICONE IRON REST OR PILLOW (USUALLY SHIPPED WITH IRON) TO REST HOT IRON.
- 4. REPLACE PADDED COVER PERIODICALLY AFTER EVERY 480 HOURS OR 6 MONTHS FOR GOOD PRESSING PERFORMANCE.


NOTE: PADDED COVER (REPLACEMENT PART #SRP410) IS MADE WITH SPECIAL HIGH TEMPERATURE FABRICS. REPLACE WITH FACTORY COVER ONLY.

5. ALWAYS TURN OFF THE SWITCH AND UNPLUG THE BOARD AFTER FINISHING IRONING, OR WHEN LEAVING THE BOARD FOR MORE THAN 15 MINUTES.



# IRONING BOARD WITH VACUUM & HEATER 4

# PARTS FOR DL-1900 IRONING BOARD WITH VACUUM & HEATER

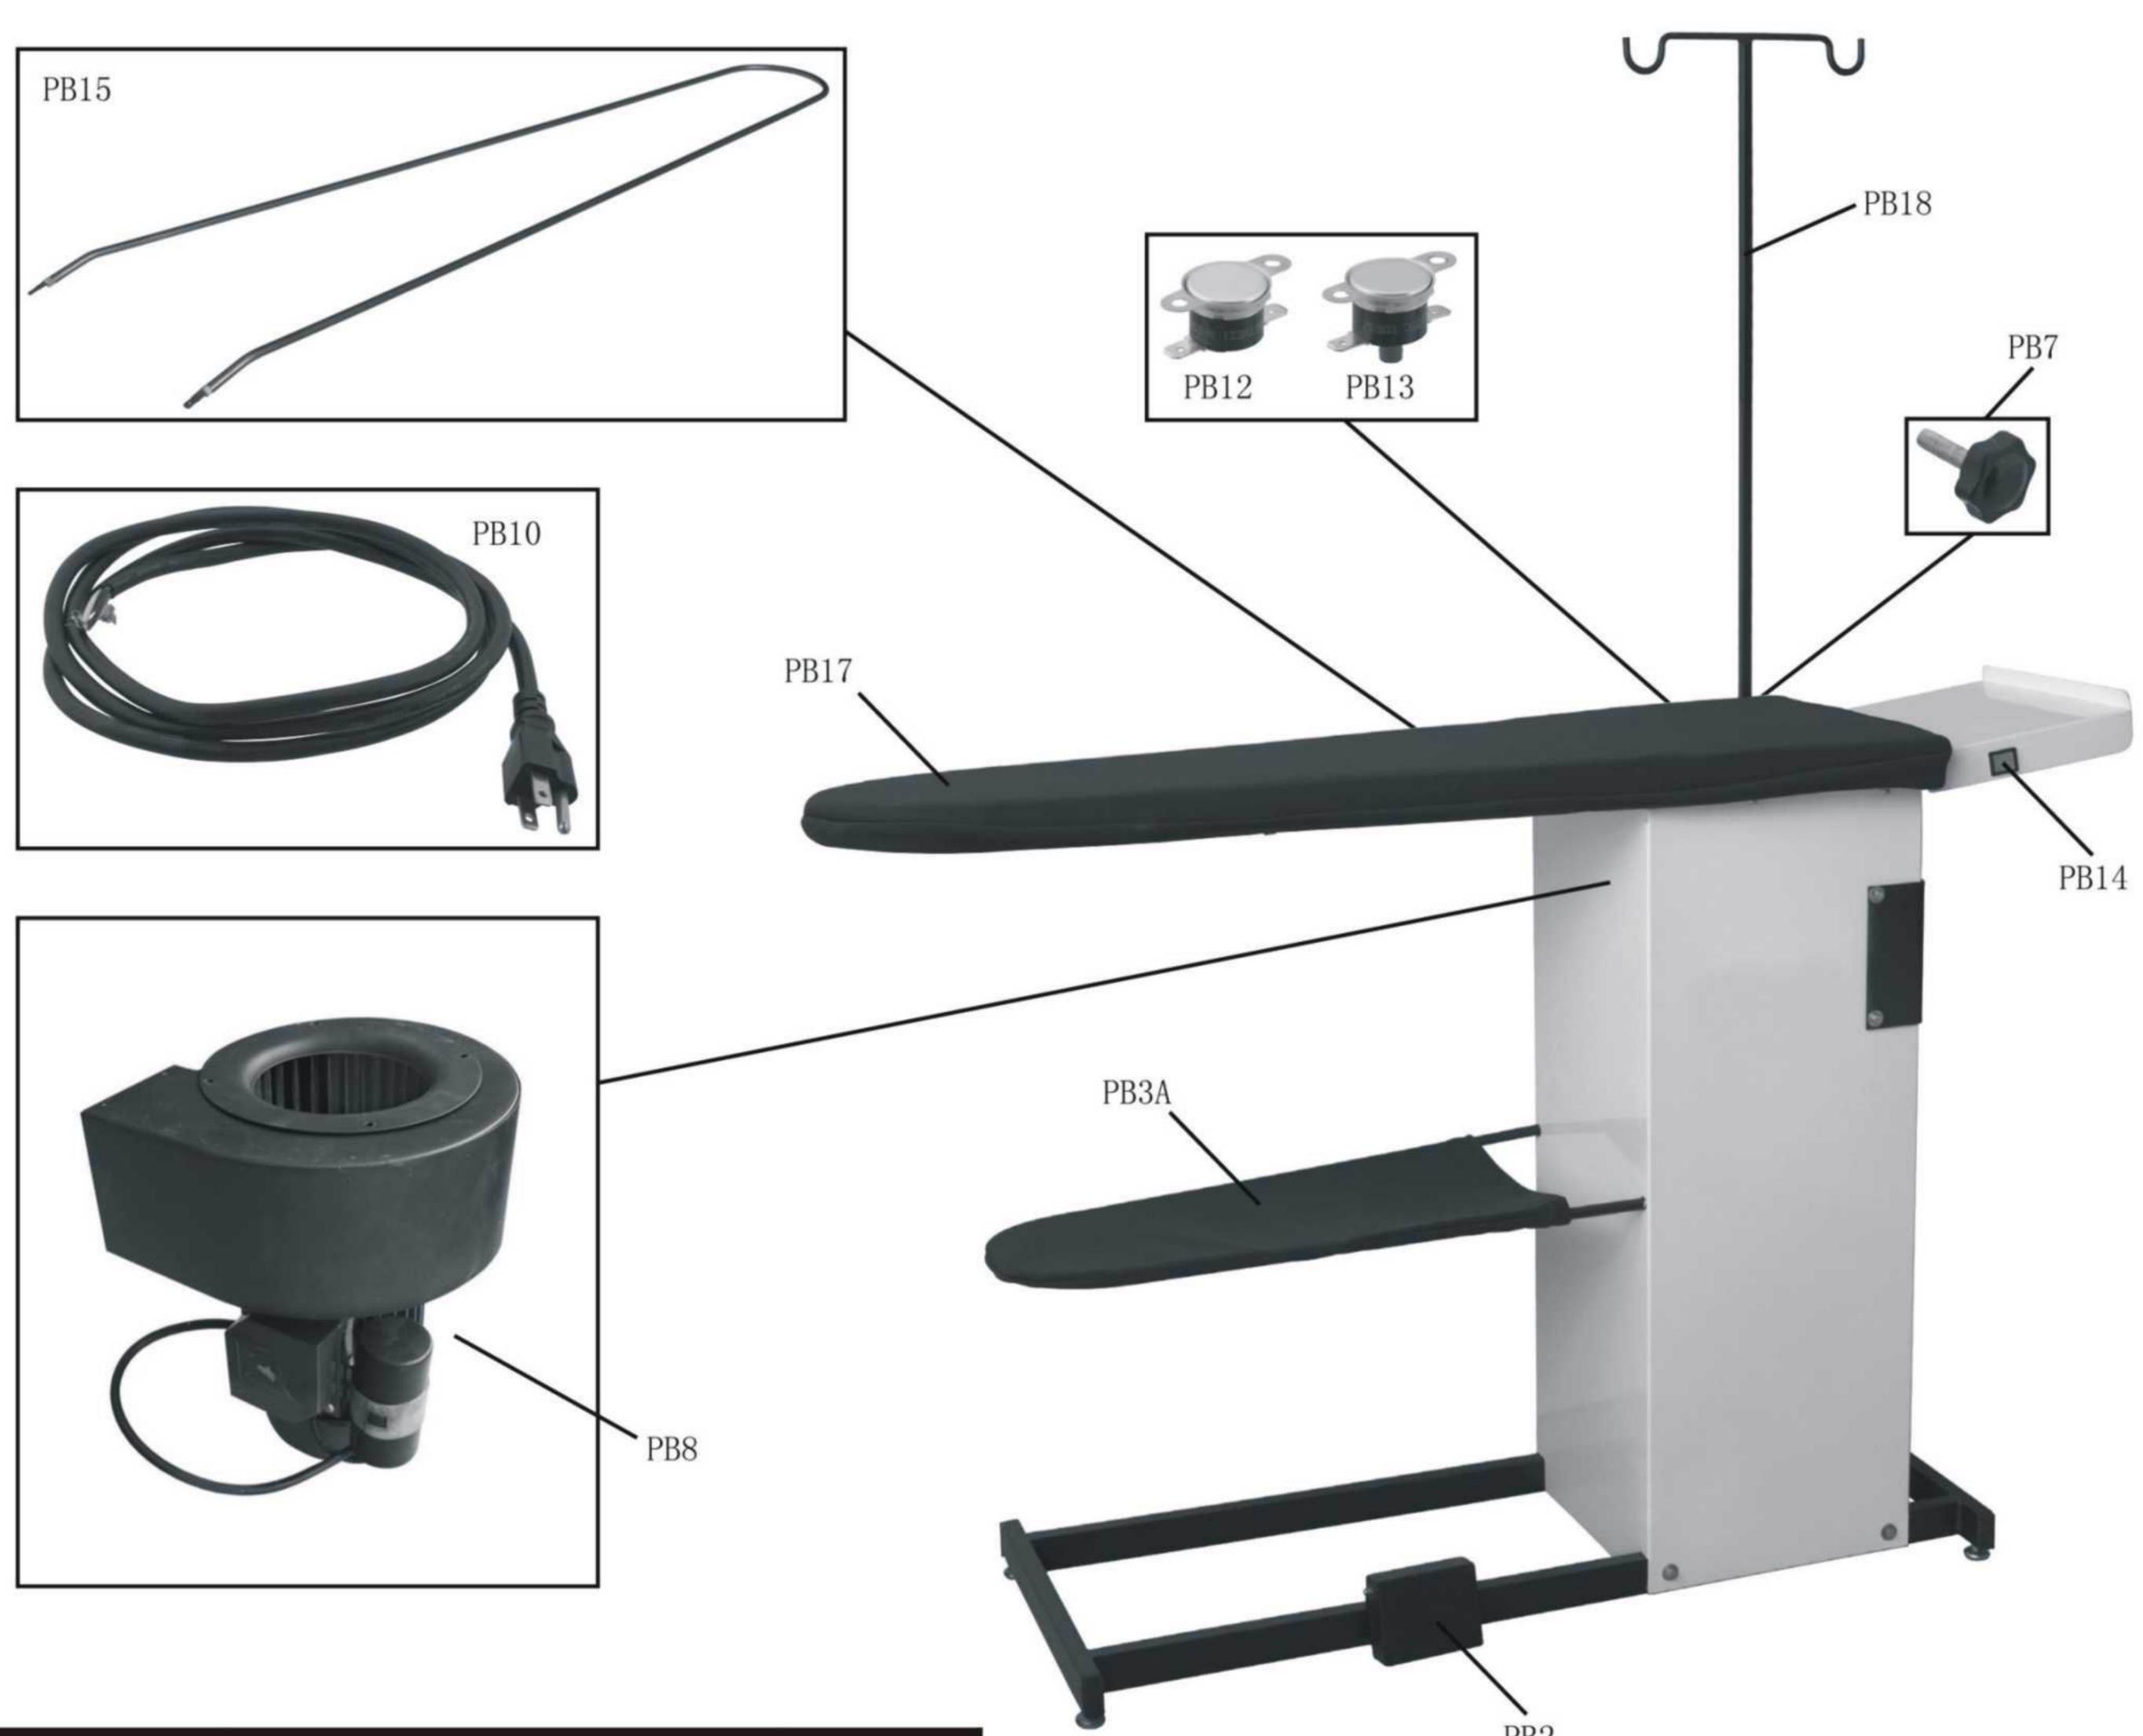

Name No.		Style No.
DL400	Vacuum Pedal Assembly	PB2
DL401	Garment Rack Cover	PB3A
DL402	Round Screw Assembly	PB7
DL403	Motor	PB8
DL405	Cord	PB10
DL406	Handle Control Thermal Adjuster	PB12
DL407	Automatic Thermal Adjuster	PB13
DL408	Power Switch	PB14
DL409	Heating Element	PB15
DL410	Ironing Board Cover and Pad	PB17
DL411	Water Bottle Hanger Rod	PB18

SPECIFICATIONS		
Model	DL-1900	
Board Heater	550W	
Vacuum	200W	
Voltage	220V/50Hz	
Assembled Dimension	53" x 16" x 35" (H)	
Ironing Surface Dimensions	43" x 15.5" x 9"	
Box Dimension	54" x 17.25" x 16.5" (H)	
Weight	75 lbs.	
Shipping Weight	84 lbs.	